

**KINGLYSLATE PEEL AND STICK:
INSTALLATION MANUAL FOR INTERIOR APPLICATION**








**KINGLYSLATE PEEL AND STICK
INSTALLATION MANUAL FOR INTERIOR APPLICATION**

PRODUCT DESCRIPTION AND USAGE

KinglySlate Peel and Stick Panel is made from thin layers of natural stone. With our panels your interiors get three-dimensional appearance in short time. Due to their low weight, they are suitable for walls and plasterboard and can be placed almost anywhere – in the living room, bedroom, bathroom, kitchen or staircase.

Type of stone panel: KinglySlate Peel and Stick Panel of natural stone.
Thickness: 1/8" – 1/4"

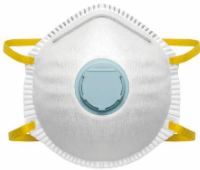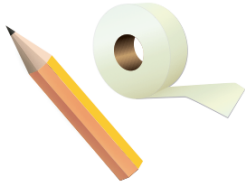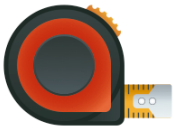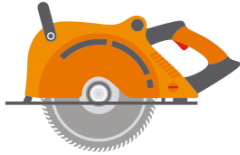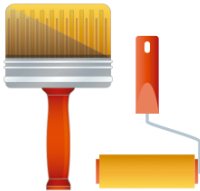Recommended tools			
			
Rubber Gloves	Respirator Mask	Airtight Protective Goggles	Pencil & Masking Tape
			
Measurement Tape	Level Ruler	Long-nosed Tin Snips and Sandpaper	Skill Saw
			
KinglySlate Adhesive	Caulking Gun	Rubber Mallet	Extendable Wall Roller
			
KinglySlate Sealer	Brush or Roller		

RECOMMENDED ASSEMBLY

PROCESS 1


The adhesive on the back side of KinglySlate Peel and Stick Panel is engineered to be installed on flat, primed, and smooth walls (plaster or ceramic tile). Before the application make sure that the surface is clean, flat, smooth, dry, and free of dust, wax, soap scum and grease. Allow the KinglySlate Peel and Stick Panel and substrate to come to room temperature before installation (65 to 100 degrees F.) Damaged, loose or uneven areas must be repaired, patched, leveled and primed. Fill cracks and irregularities with drywall compound then sand with sandpaper.

PROCESS 2


If you do not intend to prepare, sand and prime the surface, an additional adhesive should be used. We recommend Soudaseal AP adhesive to be applied on the back of each panel in these cases. Be sure to remove the release film on the back of each tile before applying additional adhesive. Apply some pea-sized dots of adhesive to the back of an entire panel. Keep the adhesive a half-inch from the edges. Firmly press the tiles into place. If adhesive squeezes out around the panels, it is important to clean up the adhesive once it has cured. The adhesive can be removed carefully with a scalpel.

Measure the area to be covered with KinglySlate Peel and Stick Panel. We recommend to lay out the entire project on a flat surface before adhering it to the substrate, to be sure you have enough panels and your design and layout is correct. KinglySlate Peel and Stick Panels can be installed in two ways - irregular or regular (see picture below). One popular layout method is to begin from the inside corner of your counter and work across left to right. This method allows you to use two points of reference, your vertical wall and horizontal counter top.

Irregular way

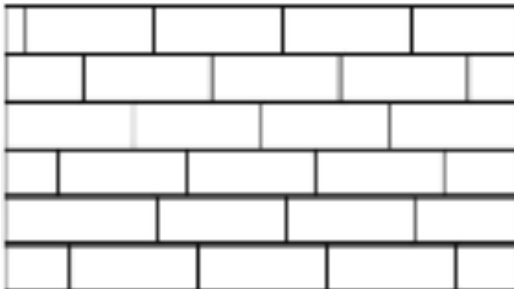


Regular way

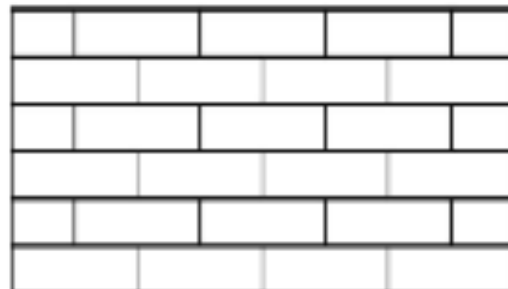

INSTALLING YOUR FIRST PANEL

1. Make sure that the surface is clean and dry. Remove the adhesive liner from the back of the KinglySlate Peel and Stick Panel. Do not remove the backing until you are sure of your placement.

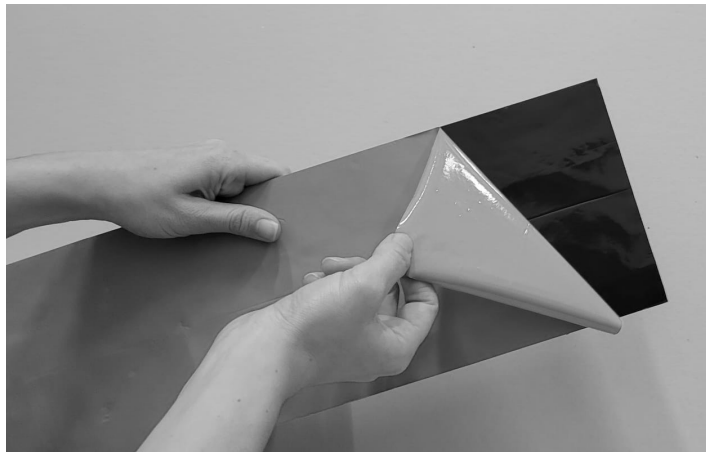



2. As you begin to place the first panel, angle the top of the tile (on one side) away from the wall so the panel does not stick before you are ready. (see picture below). Do not apply pressure to the panel until you are sure of your placement. If alignment is correct, apply pressure to the whole panel.



3. Install the other panels in the same way.



4. When placing the panels on the second row and beyond, angle the panel back about 30 degrees and rest the bottom edge on the panel below, then slide it over to butt the previous tile. Make sure the bottom edge is fitting tightly against the lower tile.

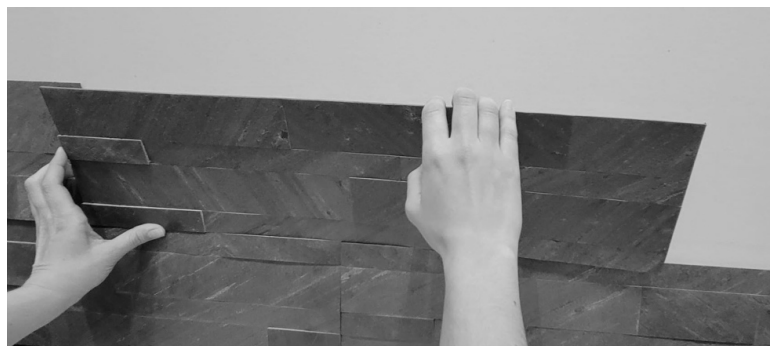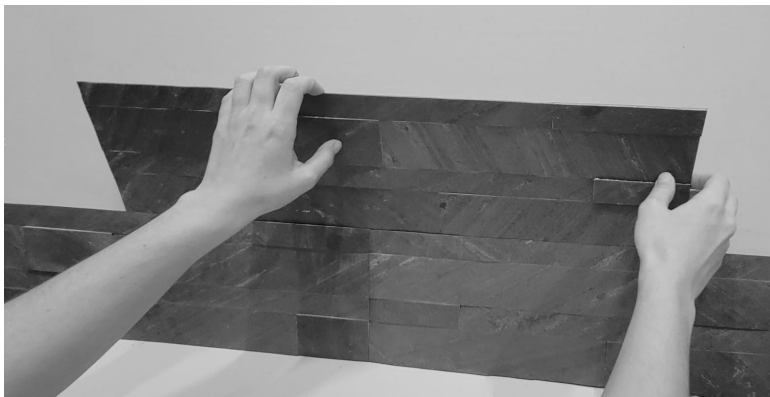


CUTTING THE KINGLYSLATE PEEL AND STICK PANEL

If cutting panels is necessary for various cutouts needed, such as an electrical outlet, we recommend to use Oscillating Tool, 18V DC. or angle grinder. Long-nosed tin snips are also helpful.


- Take the panel to be cut to the work space. Cut with long-nosed tin snips. (see pictures below)




- For inner cuts, use chisel (see pictures below).

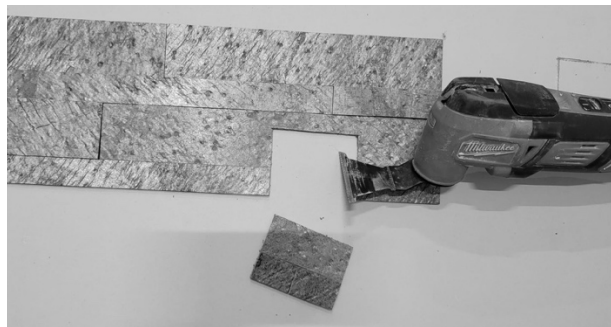


- Table saw can be a cutting option for straight cuts

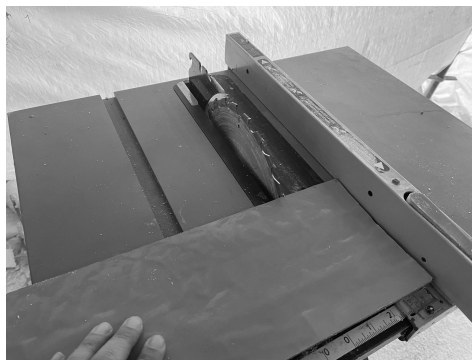

- If desired, use a metal file to debur the cut edges.

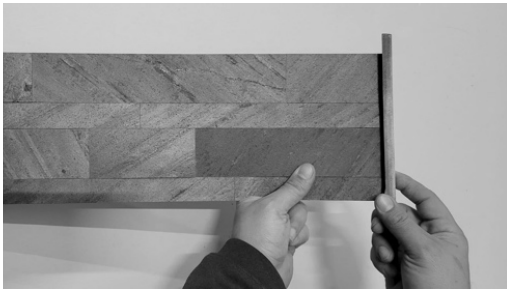

Proper position for squaring up
an edge or smoothing a rough spot

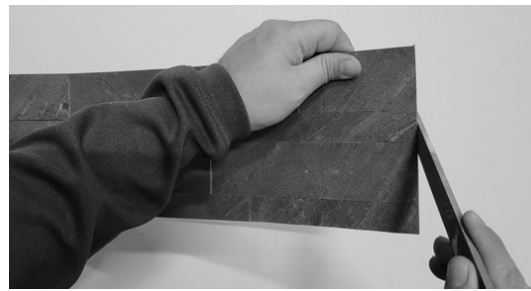

Do not file the edge at an angle

PRODUCT MAINTENANCE

It is recommended to seal the KinglySlate Peel and Stick Panel. To protect the natural stone surface, apply the sealer with a sponge roller or a brush in a very thin layer crosswise. Let the material dry and then wipe off any excess of moisture to ensure no staining in the material surface.

CARE AFTER INSTALLATION

KinglySlate Peel and Stick Panel can be cleaned up with water and PH neutral soap. A soft brush may help remove debris. Rinse the stone panels with clean water, and dry with a soft cloth to prevent water spots. If you need a more aggressive cleaner use mineral spirits to clean the surface.

SPALLING

KinglySlate Peel and Stick Panel will naturally flake. For 2-3 months after installation, small pieces may flake off the panels. This is called "spalling," and is a natural process that occurs as the stone tiles acclimate to a new environment. Lightly sweep the flakes from the surface to help release any piece. The spalling will stop once the stone tiles have settled.

REMOVING TILES

If a panel needs to be removed, apply heat with a hair dryer to soften the adhesive. Use a putty knife on the back side and slowly apply outward pressure to release the panel from the wall. Caution should be taken to don't cause any damages to the wall. Manufacturer is not responsible for the damages caused to the walls. If the panel is not ruined, more adhesive can be used to reapply the panel.